

OWNER'S GUIDE

Undercounter & Mid-Size Vaccine Storage Refrigerator & Freezer

This model complies with the requirements set forth in
the NSF / ANSI 456 Standard for Vaccine Storage¹

Table of Contents

RECEIVING AND SHIPPING DAMAGE HANDLING	2
SAFETY	3
RELEASE OF LIABILITY.....	3-4
ELECTRICAL INFORMATION.....	4
INSTALLATION	5-7
OPERATION	8-16
Quick Troubleshooting Guide	17-19
Maintenance and Cleaning	20
Hydrocarbon Service Notes	21
Factory Warranty Policy.....	22-24

RECEIVING AND SHIPPING DAMAGE HANDLING

Each refrigerator or freezer is carefully inspected to meet our high standard quality assurance policy before it ships to you. Unfortunately, shipping damage can happen during transportation to you. There are two general types of shipping damage. The first is **visible damage**. This type of damage includes visible loss, damage, shortage or any external evidence of loss or damage that is visible at time of delivery. **This type of damage must be noted in detail on your delivery receipt. Make sure the driver signs and dates the delivery receipt, acknowledging the damages. We also recommend taking many pictures to demonstrate and document the damaged area(s).** This must happen at the time of delivery or it will not happen at all. Keep a copy for your records and send another to the carrier's damage claims department along with a formal request for an inspection report. Follow up with a phone call. Their contact information can be found on the carrier's web site.

The second type of shipping damage is **concealed damage**. This type of damage will probably not be apparent at time of delivery and may not be discovered until unpacking and inspecting the unit. Remember, time is of the essence here. You should unpack and inspect the unit as soon as possible. Each day that passes reduces the likelihood that the carrier will pay the claim. **As soon as the concealed damage is discovered, stop unpacking and retain all packing materials. Take many pictures to demonstrate and document the concealed damage area(s). Contact the carrier by phone to report the claim.** Note the date and time and person you spoke with. Get a claim number. Follow up with a written letter referencing the claim number and including a formal request for an inspection. Again, consult the carrier's website for specific claim instructions and follow them precisely.



AS STATED ABOVE, THE CARRIER IS YOUR SOLE SOURCE FOR SATISFACTION OF A DAMAGE CLAIM. UNDER NO CIRCUMSTANCES SHOULD THE MERCHANDISE BE RETURNED TO THE MANUFACTURER. NO RETURNS WILL BE ACCEPTED WITHOUT PRIOR AUTHORIZATION.

SAFETY



For your safety

- DO NOT store any unsealed chemical material in this refrigerator or freezer. Corrosive fumes from chemical material can linger inside of the chamber and cause serious damage to the refrigeration coils. Storing unsealed chemical material in this equipment will void the factory product warranty.
- DO NOT store or use gasoline, or other flammable liquid in this refrigerator or freezer. This equipment is not rated to be a flammable material storage.
- DO NOT operate this equipment in the presence of explosive fumes. This equipment is not rated to be a hazardous locations refrigerator or freezer.

We offer flammable material storage and hazardous locations refrigerators and/or freezers for your application. Please contact your local sale representative for more information.

RELEASE OF LIABILITY



Before you start to use this refrigerator, please take a moment to:

- Connect your remote alarm contacts system, or auto dialer, to the refrigerator's alarm system (if any).
- Install your 3rd party alarm if desired into our refrigerator via the access porthole. Please see "MONITOR PROBE FOR FIELD INSTALLATION" Section on page 7.
- Develop an emergency backup plan and designate a different refrigerator or freezer to store the contents if this refrigerator has an unforeseen issue.

IF YOU PLAN TO STORE IRREPLACEABLE AND/OR HIGH VALUE PRODUCTS IN THIS UNIT TAKE THE PROPER PRECAUTIONS NOW.

California Residents Only:



WARNING: This product can expose you to chemicals including chromium which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to

P65Warnings.CA.gov

The manufacturer's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes, nor authorizes any person to assume obligations other than those expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES. The manufacturer is not responsible


ELECTRICAL INFORMATION

For economic loss, profit loss, or special indirect or consequential damages, including without limitation, losses, or damages arising from contents spoilage claims whether because of refrigeration or mechanical failure.

- The supply circuit to this cabinet must conform to NEC (National Electrical Code). Consult the cabinet Serial-Data plate for voltage, cycle, phase, and amp requirements before making connection.

- SUPPLY VOLTAGE SHOULD NOT VARY MORE THAN 5% FROM SERIAL PLATE RATINGS.

- DO NOT connect this equipment to a GFI (Ground Fault Interrupt) circuit.

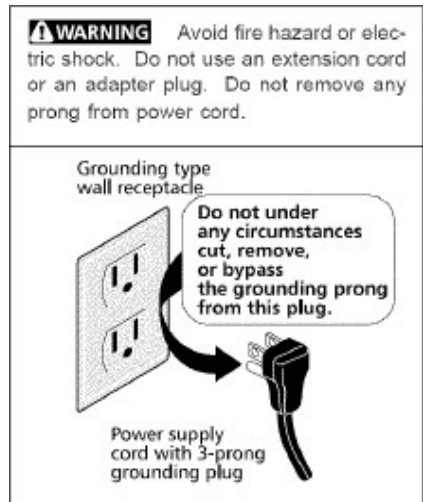

- **Do not use an extension cord or any multi-outlet strip or plug.** Using such devices can lead to insufficient power, and lead to component failure, such as the compressor or starting components.
- If the power cord is damaged, it should be replaced immediately by an authorized service technician.
- Be sure your unit is properly grounded. Use the 3-prong plug provided into a 3- prong grounded outlet. Unless the above grounding method is followed, you are not protected against severe or lethal shock in the event of a short circuit of an electrical component or wiring of the unit.

INSTALLATION

1. APPLICATION

This refrigerator or freezer has been designed and optimized to comply with the requirements set forth in the NSF / ANSI 456 standard for vaccine storage. However, manufacturers recommendations and CDC guidelines provide critical guidance as to the storage requirements for particular products. Complying with the requirements of the NSF / ANSI 456 standard does not imply that the storage requirements for your product is satisfied. Those requirements must be verified with the manufacturer and the CDC.

2. SUITABLE LOCATION

Unlike a household refrigerator/freezer, this equipment is designed for scientific/medical application. Many components are heavy duty and over- sized, to meet the ultimate temperature performance. Therefore, the sounds generated from its operation may not be acceptable to everyone in the room. Please take the sound into consideration and locate this refrigerator/freezer accordingly.

Ambient Environment - Please ensure the ambient environment is temperature and humidity controlled. Avoid placing the refrigerator or freezer in a location that may subject the area in front of the door to drastic temperature changes or air drafts, such as near HVAC registers, room doors, fans, etc.

The refrigerator/freezer was validated at room conditions per NSF / ANSI 456. Ambient environments that do not meet these conditions may result in degrade temperature control.


Clearance Space – Refrigerators or freezers that utilize static condensers (such as free-standing under counters or compact refrigerators) will require minimum 4” clearance at the back and sides for proper ventilation to ensure performance. Refrigerators or freezers that utilize active condensers fans should have 2 to 3 inches of clearance space around the refrigerator/freezer to allow for easy removal of the refrigerator for annual maintenance or service.

3. LEVELING

Leveling the refrigerator or freezer once it is at its final location is critical for equipment operation and to comply with NSF / ANSI 456 requirements. Benefits to a well-leveled refrigerator (or freezer):

1. Moving mechanical parts, such as fan and compressors will have fewer opportunities to fail since these are designed to operate in an upright position.
2. Noise reduction.
3. Door(s) will close properly and comply with NSF / ANSI 456 requirements.
4. Condensate water will flow out the refrigerator properly.

To level this equipment, set a torpedo level or similar tool on each horizontal edge of the top. If the equipment is not level, adjust either the leveling legs or casters until the unit is level side-to-side.

 It is recommended that the refrigerator/freezer is tilted slightly toward the back (about 5 degrees). This will help the door to shut properly according to NSF / ANSI 456 and the condensate water to flow out the rear drain (if applicable).

4. SET UP WIRE SHELVES

1. Some refrigerators or freezers come with fixed shelves at the bottom. Do not remove these shelves and place product on the floor. The product may be exposed to temperatures outside of the NSF / ANSI 456 temperature requirements.
2. For refrigerators or freezers without fixed shelves on the bottom, product can be placed directly on the floor, but it is highly recommended to place product on the shelf instead of the floor for best temperature control.
3. Wire shelves come with shelf clips.
4. Start at the bottom in terms of shelf installation and work your way up.
5. Properly insert the shelf clips in the desired height (remember all shelf clips will need to be installed at the same height to keep the shelf level.)
6. Always lay the back of each shelf down on the rear clips before the front. **WARNING!** Do not use pliers or any crimping tools when installing shelf clips. Altering shelf clips in any way can lead to shelving instability.
7. Bottom tab of the shelf clip will fit tightly. You may need to squeeze or twist the bottom of the shelf clip to install.

8. After installation, the shelf clip will fit snug into the shelf standard. The shelf clip should not be loose or able to wiggle out of the shelf standard.
9. When placing the shelves on the shelf clips ensure the shelf is pushed back as far as it can go. to ensure proper temperatures across the entire shelf.

5. (OPTIONAL) MONITOR PROBE FOR FIELD INSTALLATION

Each refrigerator is equipped with a probe access port hole for your independent probe installation. Remove the port covers, run your probe through and seal the hole with electrical putty to prevent air from getting into the chamber. Per NSF / ANSI 456 section 6.5.2 "...the external probe of any third-party temperature monitoring device be within the usable space for vaccine storage." We recommend placing the probe in the middle of the refrigerator or freezer.



DO NOT run your probe through the door gasket, as it may cause serious condensation or a frozen evaporator issue. The port hole is specifically designed to allow you to install the monitor probe.

6. READY TO USE

Once you ensure the electrical service is adequate and Steps 1 through 4 are followed, you are ready to use this refrigerator (or freezer). Simply plug in the power cord into the wall outlet.


For best performance load product as close to the center as possible. Avoid placing product on the floor. Some units have bars on the back of the wire shelf. It is strongly recommended not to load boxes beyond this bar.

This refrigerator/freezer is factory optimized for best performance to comply with the requirements set forth in the NSF / ANSI 456 standard. Do not adjust the operational parameters settings.

OPERATION

Temperature Controller System

The digital microprocessor temperature controller is designed to provide temperature control of refrigerators or freezers. The controller also provides a constant readout of the sample temperature inside of the unit. A touch keypad allows the user to easily select the display units, set point, and differential set point.

 **Please Note: The digital temperature controller has been factory set and tested to allow your unit to comply with the NSF / ANSI 456 standard.**


Adjusting the settings on the controller will alter these factory settings and possibly make the unit no longer compliant with the NSF / ANSI 456 standard. WE STRONGLY RECOMMEND YOU CONTACT THE MANUFACTURER'S TECHNICAL SUPPORT DEPARTMENT BEFORE MAKING ANY ADJUSTMENTS TO THIS CONTROLLER - (800) 648 4041. SELECT OPTION 5 FOR TECHNICAL SERVICE.



CHECK THE SET POINT

Press and release [SET] button. The display will show the current set point value.

Operation

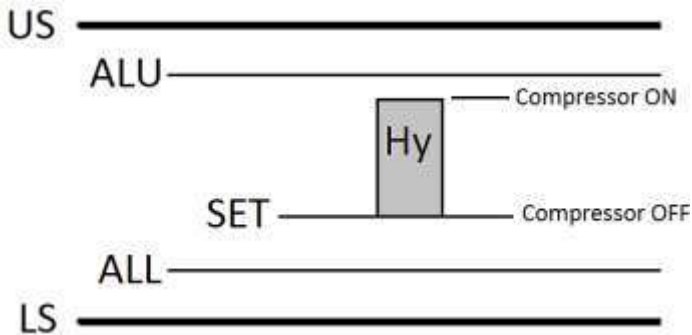

During the normal operation, the refrigerator's (or freezer's) compressor would turn on and off, to maintain the cold temperature in the storage chamber.

In this controller, the point where the compressor is cut off is called "SET POINT". The point where the compressor is turned on is calculated by adding the value of "SET POINT" and "Hy" (temp differential).

"ALU" is the high temp alarm point, and "ALL" is the low temp alarm point. Both alarm settings will alert users when the refrigerator's (or freezer's) temp is out of range, via visual & audible alarm, and remote alarm contact. Adjusting the alarm settings will make the unit no longer NSF / ANSI 456 compliant.

"US" is the upper setting limit, and "LS" is the lower setting limit. Both limit settings will prevent users accidentally adjust "SET", "ALU", or "ALL" outside the range




PLEASE NOTE: SETTINGS CHANGES NOT RECOMMENDED FOR ANY FACTORY SETTING(S); ANY CHANGE MAY COMPROMISE THE UNIT'S ABILITY TO PERFORM IN COMPLIANCE WITH THE NSF / ANSI 456 STANDARD.

CODE	DESCRIPTION	FACTORY SETTING
SET	Temp set point (compressor off point)	Varies with the unit.
Hy	Temp differential between compressor start and off point	Varies with the unit
ALL	Low temp alarm point	2.0 °C (35.6 °F) (refrigerator) -50 °C (-58 °F) (freezer)
ALU	High temp alarm point	8.0 °C (46.4 °F) (refrigerator) -15°C (5°F) (freezer)
Lod	Screen display choice (air or sample probe)	P3
CF	Celsius & Fahrenheit unit change	Celsius
O3	Sample (display) probe calibration / offset	0
OT	Air (control) probe calibration / offset	0
US	The maximum limit that SET or ALU could reach	8.0 °C (46.4 °F) (refrigerator) -15°C (5°F) (freezer)
LS	The minimum limit that SET or ALU could reach	2.0 °C (35.6 °F) (refrigerator) -50°C (-58°F) (freezer)

If there is any question or concern, please feel free to contact our technical service department. (800) 648 4041, select the option 5 for Technical Service.

Advanced Settings – for service technician only

 **ATTENTION: This section is for service technicians or experienced users only. Altering the following settings can result in malfunction or inaccurate temperature readout.**


Air and Sample Temperature Display

The controller has the capability to display either the air or sample temperature readout. For the normal operation, the sample-simulated temperature (P3) is displayed to provide users the content temperature. For the actual operation, the air temperature (P1) is used to control the compressor's cycle.

This is a useful tool for you to make a precise adjustment, or temperature validation process.

“Lod” setting allows you to display either air (P1) or sample (P3). Press and hold both [SET] and [DOWN] at the same time until “Hy” appears on the display.

Press [UP] or [DOWN] until “Lod” shows up. Press [SET] to enter the setting. Press [UP] or [DOWN] to toggle between the air temp “P1”, or the sample temp “P3”. Press [SET] once to confirm the new setting. The display will now show the temp you have selected.


 **We strongly recommend you change the “Lod” setting back to “P3” before you complete the service. Failure to do so will make the unit no longer compliant with NSF / ANSI 456.**

Calibration / offset


“O3” setting allows you to change the display reading offset. The refrigerator or freezer comes with a calibrated NIST traceable sample probe. It is recommended that the sample probe be calibrated annually.

For assistance or more advanced settings, please contact our Technical Service Department. (800) 648 4041, select the option 5 for Technical Service.

D-100 Alarm System (If Applicable)

 Upon receiving the refrigerator or freezer, please take a moment to activate the battery to D-100 alarm system. The battery supports D-100's alarm operation during a power failure event. This is an important step. See the following information on the battery backup alarm function.

D-100 temp display and alarm system is specifically designed to display the refrigerator's interior sample temperature and give out alarms if an error occurs.

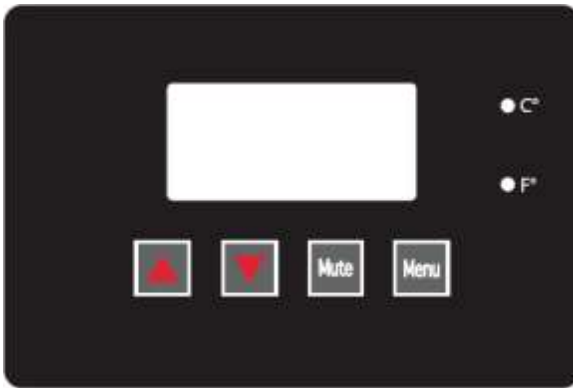

FEATURES

- Sample temperature display
- Decimal temperature readout
- Battery backup for power failure
- One point HI and LO temp history
- Temperature calibration (offset)
- °C/°F readout switch
- BI-color background readout
- Visual Alarm
- Audible Alarm
- Remote Alarm
- High temp alarm
- Low temp alarm
- Power failure alarm
- Sensor error alarm



Please Note: The D-100 temp display and alarm system has been factory set and tested to allow your unit to comply with the **NSF / ANSI 456 standard**.

Adjusting the settings on the display will alter these factory settings and possibly make the unit no longer compliant with the NSF / ANSI 456 standard. WE STRONGLY RECOMMEND YOU CONTACT THE MANUFACTURER’S TECHNICAL SUPPORT DEPARTMENT BEFORE MAKING ANY ADJUSTMENTS TO THIS CONTROLLER - (800) 648 4041. SELECT OPTION 5 FOR TECHNICAL SERVICE.

MAIN SCREEN

During the normal operation, the display shows the interior temperature. The background color will be **green**.

During an alarm condition, the display toggles between the current interior temperature, and error code. The background color would be **flashing red**.

ALARM CODE

CODE	DESCRIPTION
HA	High Temperature Alarm
LA	Low Temperature Alarm
SA	Temperature Sensor Failure Alarm
dA	Door Ajar Alarm
PF	Main Power Failure Alarm

BATTERY BACKUP & POWER FAILURE ALARM

The D-100 battery backup system uses 4 each AA rechargeable batteries. During the power failure, the batteries will support the alarm system and the temperature display for 8 hours. When the power resumes, the batteries will be automatically recharged.

During a power failure event, the visual display will turn into flashing red background with “PF” (power failure) message. Audible alarm & remote alarm contact would be activated to alert users. The D-100 will still display and monitor the refrigerator

temperature during a power failure event until the battery power is depleted.

Once the power resumes, the display will still be flashing red, and showing “PF” message, even if the refrigerator’s temperature is normal. It is a feature to alert users that a power failure event has occurred. Users should check the temperature history on the display. To clear the “PF” message, press any button.

CHECK TEMPERATURE HISTORY

Press [UP] button. The display will show the maximum temperature ever reached since the last reset.

Press [DOWN] button. The display will show the minimum temperature ever reached since the last reset.

Press [UP] and [DOWN] button together simultaneously for 4 seconds to clear out the history. The maximum and minimum record will be erased and record the next maximum and minimum temp point.

MENU

Press [MENU] button to enter the user adjustable settings. Press [UP] or [DOWN] to select which setting you would like to make an adjustment.

CODE	DESCRIPTION	FACTORY DEFAULT
ALU	High temp alarm point	8°C or 46.4°F (refrigerator) -15°C or 5°F (freezer)
ALL	Low temp alarm point	2°C or 35.6°F (refrigerator) -50°C or 58°F (freezer)
Ad	Visual & audible alarm delay (minutes)	0 (minutes)
CF	Celsius & Fahrenheit unit change	°C or °F
dA	Door ajar alarm (minutes)	NO (disable) Door alarm is for selected models only.
rD	Remote alarm delay (minutes)	5 (minutes)
Snd	Mute duration (minutes)	30 (minutes)
OFF	Temp readout calibration / offset	Current readout



Please Note: The alarm settings on the temperature controller system will be disabled so only the D-100 alarm system settings are applicable.

At each setting, press [UP] or [DOWN] to make a change. Then press [MENU] to confirm the new change and move to the next setting.

For example, to change the low temp alarm point: press [MENU] till the display shows [ALL]. Press [UP] to change the factory setting 0C to 1C. Press [MENU] to confirm the setting. And the display will show “Ad” next.

To return to the main display, either cycle through the entire menu from “ALU” to “OFF”, or take no action for 30 seconds. The display will return to the temperature display mode.

CHANGE TEMPERATURE READOUT BETWEEN °C AND °F

Press [MENU] 4 times till “CF” displays. Press [UP] or [DOWN] to change between °C and °F. The right side °C / °F indicator will toggle according to your selection. Press [MENU] again to confirm your change.

CALIBRATION / OFFSET (OFF)

The unit may come with an offset applied using NIST traceable equipment. Before making an OFFSET change, please note that this procedure should only be carried out by a certified technician with a NIST traceable calibrated thermometer.

This feature allows a user to change the temperature reading with +/- 10 degree differences.

For example, if a technician’s NIST traceable calibrated thermometer is reading 5C, while D-100 reads 3C, make a +2C change in OFF setting.

REMOTE ALARM DELAY (rD)

It is a time delay after the visual and audible alarm being activated. It gives users some time to correct an error, before sending the alarm to the remote monitor system.

For example, rD is set to be 5 (minutes). A user forgets to close the refrigerator’s door, and the temperature warms up to 10C. The High Temp (HA) visual and audible alarm will be activated. If the temperature continues to stay above High Temp, 5minutes later the remote alarm will be activated.

Please note, Remote Alarm will be immediately activated during a power failure event. It would be deactivated when the power resumes and the temperature returns to normal.

REMOTE ALARM SYSTEM (SPSTRELAY)

It is recommended to contact your facility manager, or a local technician to assist you in connecting the remote alarm system.

D-100's remote alarm system is wired to be gray and white leads. It is located at either:

1. Underneath of top sign canopy
2. Behind the unit, next to the compressor.

During non-alarm state, the remote alarm system is at CLOSED position (NC).

During an alarm state, the system is at OPEN position.

Rating: 3 amps.

Quick Troubleshooting Guide

Check these items before calling for service

PROBLEM:	POSSIBLE CAUSE / SOLUTIONS:
Unit does not run	<ul style="list-style-type: none"> • Electrical circuit is not 110-120V 60Hz. • The power cord is not plugged in. • No power at electrical outlet. Check to make sure breaker is not tripped or fuse is not blown. Additionally, make sure unit is not plugged into a Ground Fault Circuit Interrupter (GFCI) type of outlet.
Unit does not maintain at the proper temperature	<ul style="list-style-type: none"> • Check the room temperature. We recommend the refrigerator or freezer should be placed in an air-conditioned room between 20.5°C - 23.5°C (69°F to 74°F). If the room temp is too warm, the refrigerator or freezer may not be able to maintain the interior temp at proper range. • Door is not closed properly. Refer to the Leveling section on page 6 for adjustment. • Amount of stored product is overloaded. • Product replacements are pushed against rear wall or interrupted the proper refrigerator air circulation. For the proper air circulation, place the products evenly on each shelf. Do not push against the refrigerator's rear or side walls. • Evaporator is blocked by frost or ice. Remove the products, unplug the refrigerator or freezer power, and allow the unit to defrost. If the problem still exists, call for service. • 3rd party thermometer is placed incorrectly. For proper temperature monitoring, the thermometer should be placed in the middle of refrigerator. <p>PLEASE NOTE! Prior to shipment, each refrigerator and freezer has been calibrated and tested at proper temperature range.</p>

Appliance runs too long	<ul style="list-style-type: none"> • Prolong door openings. • Room temperature is high which will make the unit work harder to keep cool.
Temperature of external wall surface is warm	<ul style="list-style-type: none"> • The exterior walls can be as much as 30 degrees warmer than room temperature due to the embedded condenser coils. This is normal when the unit is operating.
Compressor noises	<ul style="list-style-type: none"> • Compressor may be overheated. Please check the room temp and ensure the range is within 20.5°C -23.5°C (69°F to 74°F). If the problem still exists, call for service.
Moisture collects inside	<ul style="list-style-type: none"> • Door gasket is not sealing properly. Check for debris, cracks, and items passing through door at the gasket. • The refrigerator or freezer is facing a doorway or is underneath of air conditioning vent. Relocate the unit or redirect air vent. • Too many door openings. Minimize time door is open. • Hot, humid weather increases condensation. • Make sure there is a water trap (U-shaped loop) in the drain tube near the compressor. This will “trap” a small amount of water in the loop and prevent air from entering the • chamber through the tube.
Moisture collects on outside surface	<ul style="list-style-type: none"> • Hot, humid weather increases condensation. • As humidity decreases, moisture will disappear.
Odor inside the unit	<ul style="list-style-type: none"> • Interior needs to be cleaned. See section on maintenance and cleaning in this manual. • Make sure product containers are tightly sealed to prevent leakage
Door will not close	<ul style="list-style-type: none"> • The unit is not level. Refer to the Leveling section on page 6 for adjustment. Check for dirt and debris or items passing through the door seal.

MOISTURE DURING THE SUMMER SEASON

The amount of moisture, condensation, or high humidity related issues increase during the summer and, in most cases, will self-resolve when the weather cools down. Please note a refrigeration system will NOT generate moisture or water but simply condenses the moisture that is already in the chamber. Keeping the unit in an air conditioned, low humidity space will resolve many issues. Other things you should check:

1. Location of the refrigerator (See Quick Troubleshooting Guide page 12-13)
2. Door sealing and frequency of door opening event (See Quick Troubleshooting Guide page 12-13)
3. Make sure there is a water trap (U-shaped loop) in the drain tube near the end. This will “trap” a small amount of water in the loop and prevent air from entering the chamber through the tube.

BEFORE CALLING THE MANUFACTURER’S TECHNICAL SUPPORT DEPARTMENT,

please have the unit’s model and serial number ready as well as the problem description. The model and serial number is located on the serial tag which can be found on the interior left upper wall of the unit.

Maintenance and Cleaning

MAINTENANCE (MANUAL DEFROST FREEZERS ONLY)

All manual defrost units will come with a blue frost indicator located on the unit's top front corner of the interior side wall or the front of the middle shelf. When the blue label is no longer visible the freezer will need to be defrosted.

It is recommended to defrost the freezer even if the blue label can be seen if

- It has been 6 months from the last defrost.
- The freezer is not keeping temperature.
- An excessive amount of ice is in the unit.

CLEANING

PART	CLEANING AGENTS	TIPS AND PRECAUTIONS
Interior and Door Liners	Soap and water Baking soda and water	Use 2 tablespoons of baking soda in 1 quart of warm water Be sure to wring excess water out of sponge or cloth before cleaning around controls, light bulb, or any electrical parts.
Door Gaskets	Soap and water	Wipe gaskets and their seating surfaces with a clean, soft cloth
Shelves	Soap and water	Do not wash removable shelves in dishwasher
Exterior and Handles	Soap and water Non-Abrasive Glass Cleaner	Do not use commercial household cleaners, ammonia, or alcohol to clean handles Use a soft cloth to clean smooth handles. Do not use a dry cloth to clean smooth handles
Door Gaskets	Soap and water	Wipe gaskets and their seating surfaces with a clean, soft cloth

Clean the glass with a mild detergent and water on a soft cloth or sponge. Rinse with water and wipe dry.

For swinging door units, pay attention to the gasket and its seating surfaces. Any debris buildup on these can cause air leaks into the compartment resulting in condensation as well as reduced efficiency.

Hydrocarbon Service Notes

According to U.S. Code of Federal Regulation 40 Part 82, this refrigerator employs the natural refrigerant, specifically hydrocarbon, R290 or R600a.

Because of the nature of hydrocarbon refrigerant, for mechanical repair, such as recharge the refrigerant, or compressor replacement, should only be carried out by a certified refrigeration technician.

The safety of this equipment is listed by Underwriter Laboratory (UL) under Standard 471, Section SB – “natural refrigerant”.

Factory Warranty Policy

Horizon Scientific, Inc. warrants to the original purchaser every new Horizon Scientific, Inc. refrigerated unit, the cabinet, and all parts thereof, to be free from defects in material or workmanship, when such unit is installed, used, and maintained in accordance with provided instructions.

The warranty period starts two weeks from the date of shipment from Horizon Scientific, Inc. This two-week period allows ample shipping time so that the warranty will go into effect at approximately the same time your equipment is delivered. Unless subject to prior written agreement with Horizon Scientific, Inc., this warranty does not allow for any warranty start deferment greater than two weeks from date of shipment due to a delayed installation and/or start-up. By purchasing any product from Horizon Scientific, Inc., you and any entity for which you are purchasing acknowledge and agree to every provision contained herein, and all other Notices and Terms provided to Purchaser by Horizon Scientific, Inc., which are hereby incorporated.

Under this warranty, Horizon Scientific, Inc., through its authorized service organizations, will repair, or at its option, replace any part found to contain a manufacturing defect in material or workmanship without charge to the owner for parts and service labor. Replacement or repaired parts will be warranted for only the unexpired portion of the original warranty. Horizon Scientific, Inc. will not assume any shipping or cartage costs for parts under warranty. These costs shall be paid by the customer.

ADDITIONAL COMPRESSOR WARRANTY

In addition to the standard warranty, Horizon Scientific, Inc. warrants its hermetically and semi-hermetically sealed compressors to be free from defects in both material and workmanship under normal use and service in addition to the standard warranty period. Compressors determined by Horizon Scientific, Inc. to have been defective within this extended time period will, at Horizon Scientific, Inc.'s option, be either repaired or replaced with a compressor or compressor parts of similar design and capacity.

The compressor warranty applies only to hermetically and semi-hermetically sealed parts of the compressor and does not apply to any other parts or components, including, but not limited to, cabinet, paint finish, temperature control, refrigerant, metering device, driers, motor starting equipment, fan assembly or any other electrical components.

Horizon Scientific, Inc.'s sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES. Horizon Scientific, Inc. is not responsible for economic loss; profit loss; or special, indirect, or consequential damages, including without limitation, losses or damages arising from contents spoilage claims whether because of refrigeration failure, electrical failure, power failure, or compressor failure. HORIZON SCIENTIFIC, INC.'S MAXIMUM CUMULATIVE LIABILITY RELATIVE TO ALL CLAIMS AND LIABILITIES, INCLUDING OBLIGATIONS UNDER ANY INDEMNITY, WHETHER OR NOT INSURED, SHALL NOT EXCEED THE COST OF THE PRODUCT(S) GIVING RISE TO THE CLAIM OR LIABILITY.

WARRANTY IS NOT TRANSFERABLE. This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, express or implied, including any warranty of merchantability of fitness for a purpose. **NO IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE.** There are no other warranties, express, implied, or statutory, except the standard warranty and the additional compressor warranty as described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability of fitness for a purpose.

There are no warranties which extend beyond the description on the face hereof, whether based on contract, warranty, tort (including negligence), strict liability, indemnity, or any other legal theory, and whether arising out of warranties, representations, instructions, installations, or non-conformities from any cause. Purchaser further acknowledges that the purchase price of the Product reflects these warranty terms and remedies.

ALTERATION, NEGLIGENCE, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD OR OTHER EXTERNAL CAUSES.

Horizon Scientific, Inc. is not responsible for the repair or replacement of any parts that Horizon Scientific, Inc. determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit or installation, fire, flood or other external causes. It does not apply to defects resulting from failure to properly install, operate or maintain the product in accordance with the

printed instructions provided, or damage caused by the storage of any corrosive material that comes in contact with the interior or exterior portions of the cabinet, or the use of spark producing equipment or containers (such as galvanized or carbonized steel containers) that come in contact with any interior portion of the cabinet.

OUTSIDE U.S./CANADA. This warranty does not apply to, and Horizon Scientific, Inc. is not responsible for, any warranty claims made on products sold or used outside the United States and Canada.

CHOICE OF LAW/VENUE. The laws of the State of South Carolina shall govern the validity, interpretation, and enforcement of this warranty, regardless of conflicts of law principles. Purchaser agrees that proper venue for any action to enforce the terms of this warranty shall be the Dorchester County District Courts, South Carolina. Purchaser submits the jurisdiction of such courts over the Purchaser and the subject matter of any such action. Any action for breach of these warranty provisions must be commenced within one (1) year after that cause of action has accrued.

WARRANTY CLAIMS. To obtain prompt warranty service, simply contact the manufacturer at 800-648-4041. Horizon Scientific, Inc.'s shipping records showing date of shipment shall be conclusive in establishing the warranty period. All claims should include: model number of the refrigerator, the serial number of the cabinet, proof of purchase, date of installation, and all pertinent information supporting the existence of the alleged defect. Any repairs must be authorized by Horizon for the warranty to be honored.

1 – NSF is a registered trademark of the National Sanitation Foundation